




## LG Air Conditioning - Universal Split Fault Codes Sheet

### "Universal" Split Systems

If there is a fault on any LG Universal unit, a two digit number will appear on the remote controllers display. If the unit does not have a remote controller the fault will be displayed using the LED's on the indoor unit.

### Heat Pump Model

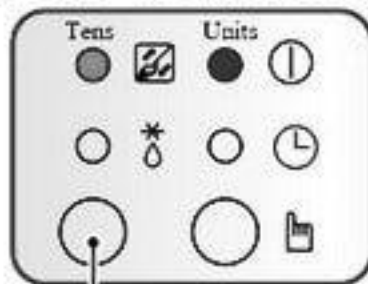

Signal Receptor



Units Digit (Red) Tens Digit (Green)

The "Units" digit of the fault code is shown by the power led which has the following symbol by it. This is usually Red, but on a few models it is Green.


The "Tens" digit will be displayed by one other led, usually the "Sleep" or "Filter" lamp.

#### Error Indicator:


- The function provides self-diagnosis and displays an error code if there is any trouble.
- Error codes are displayed on the Indoor unit's Wired Remote as CH\*\*, and/or Fascia Display. In addition, the code is indicated via LED's on the outdoor unit control board.
- If more than two troubles occur simultaneously, the lower number of error code is displayed.
- After an error occurs, if error is released, error LED is also released simultaneously.

The input power is supplied to the outdoor unit (wire harness supplied).

The indoor unit draws its power from and communicates with the outdoor by a series of wires. These wires are all contained in a single wire harness that is pre-wired to the indoor unit. Attached to the end of this wiring harness is a Quick-Connect terminal, which connects to its corresponding terminal located in the electrical panel of the outdoor unit. This Quick-Connect system substantially reduces installation time.

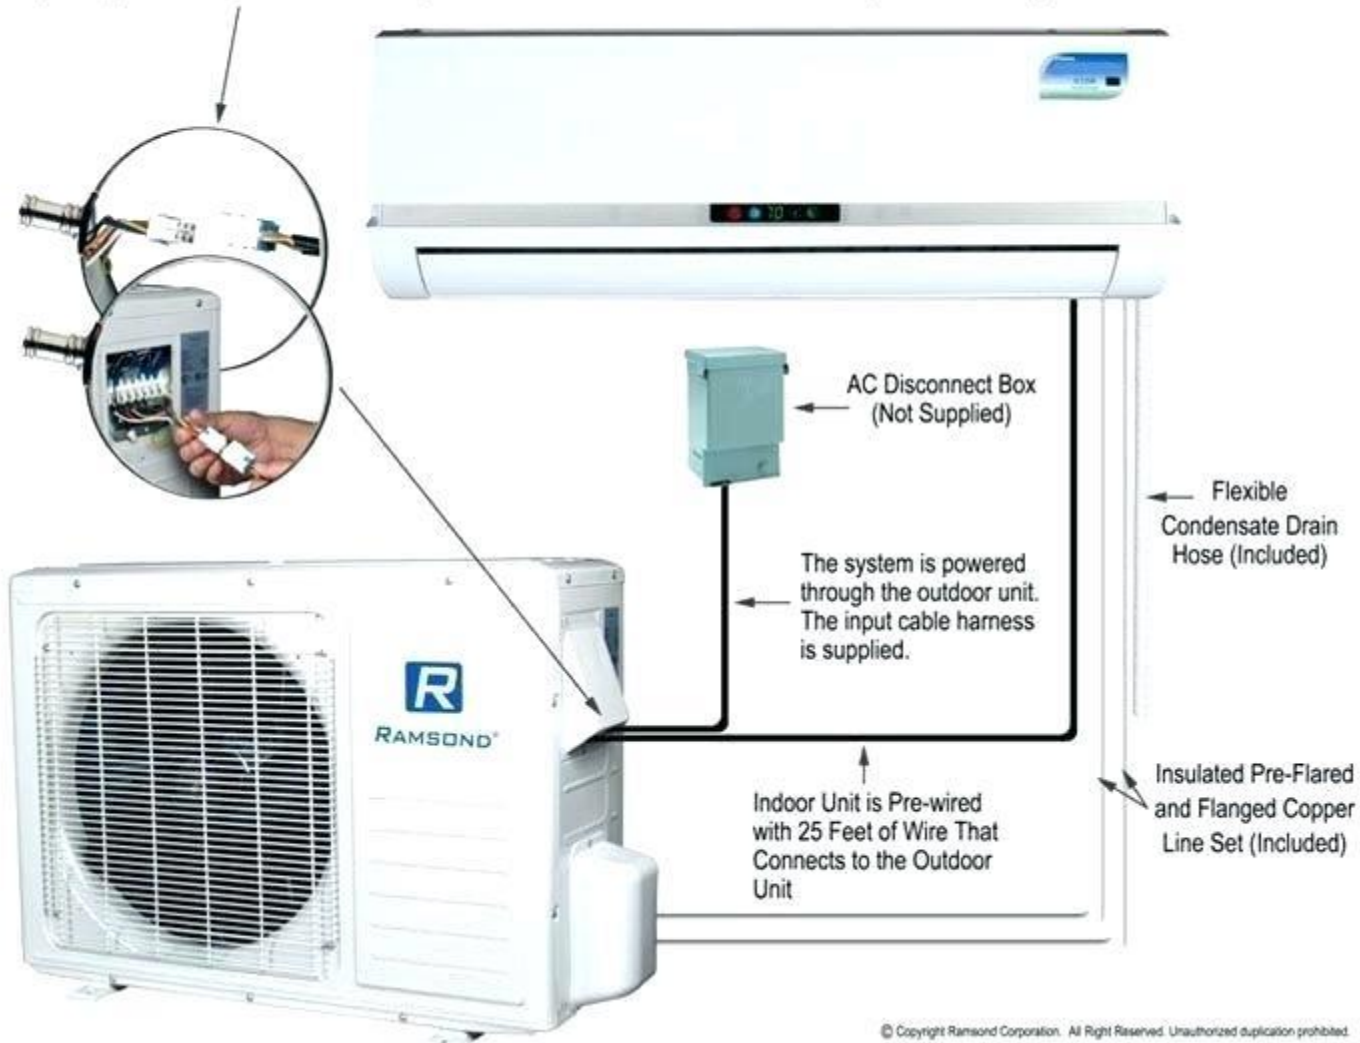

### 3. Fan and light sharing supply from wall

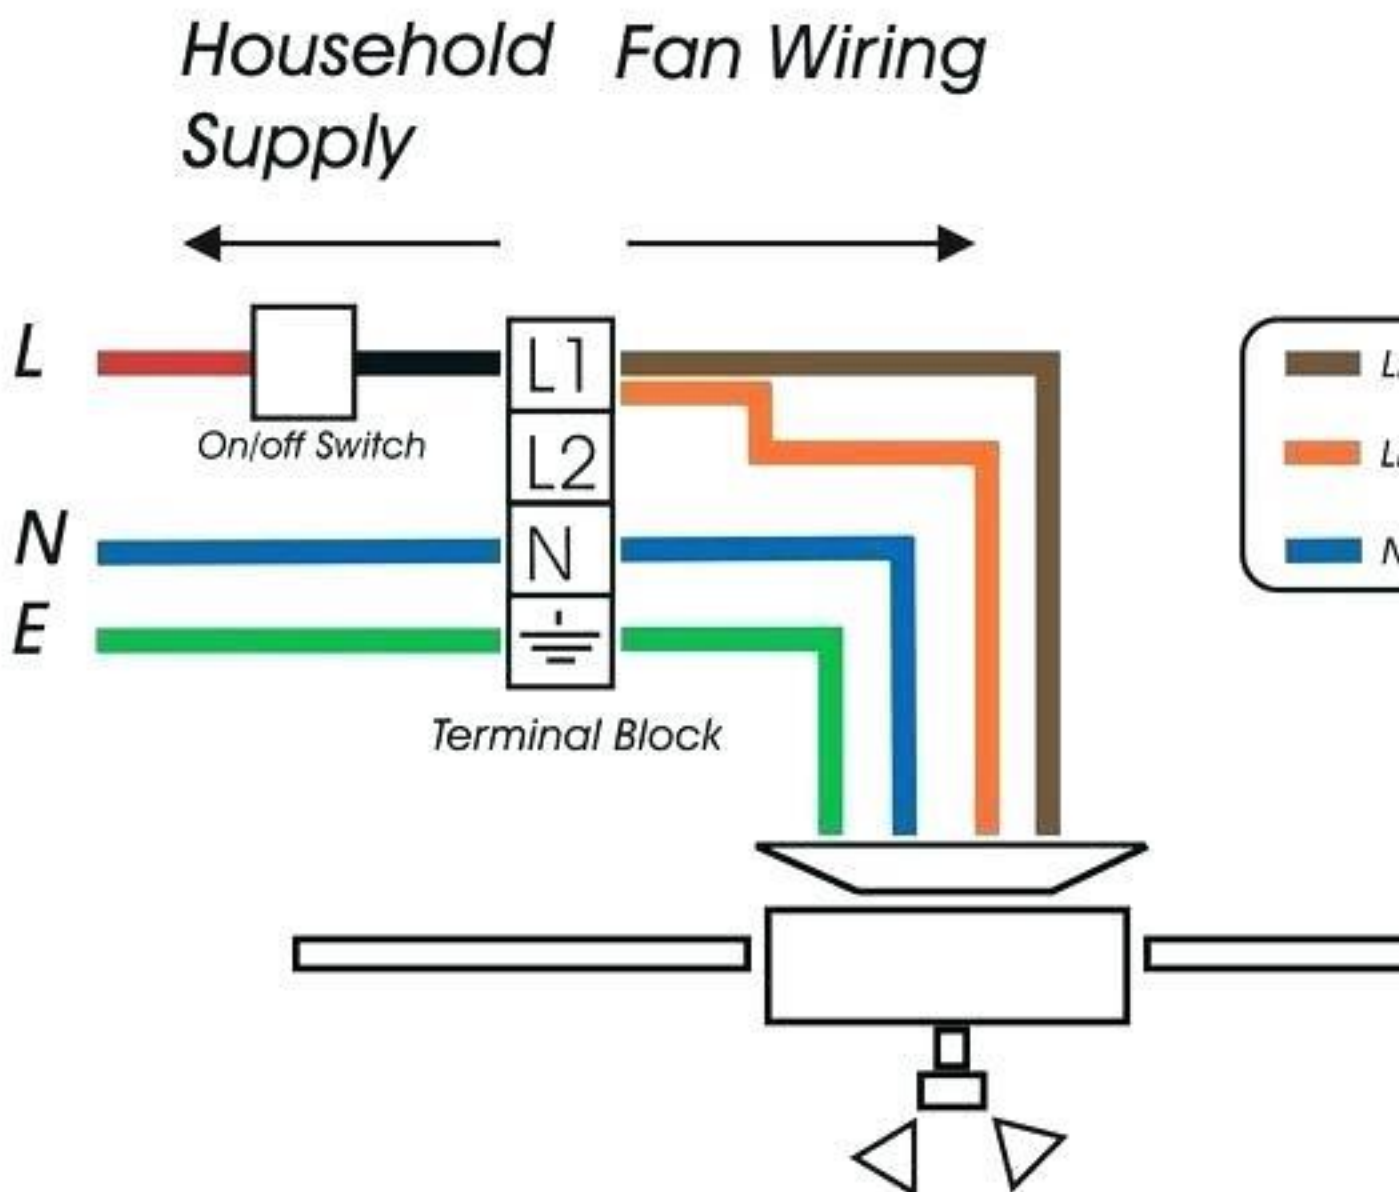

*Warning: In the unlikely event of a problem occurring the only way to turn the fan off in this scenario is to remove the supply's fuse.*

Disclaimer - This diagram is to be used as a guide. Use of this guide is at the installers risk.



website <http://www.lgservice.com>

LG

# LG Room Air Conditioner

## ***SERVICE MANUAL***

**MODELS:** AS-W096URH0/UBH0/UWH0/UMH0  
AS-W126URH0/UBH0/UWH0/UMH0/UCH0  
AS-W096URH1/UBH1/UWH1/UMH1  
AS-W126URH1/UBH1/UWH1/UMH1

### **CAUTION**

- BEFORE SERVICING THE UNIT, READ THE SAFETY PRECAUTIONS IN THIS MANUAL.
- ONLY FOR AUTHORIZED SERVICE PERSONNEL

